





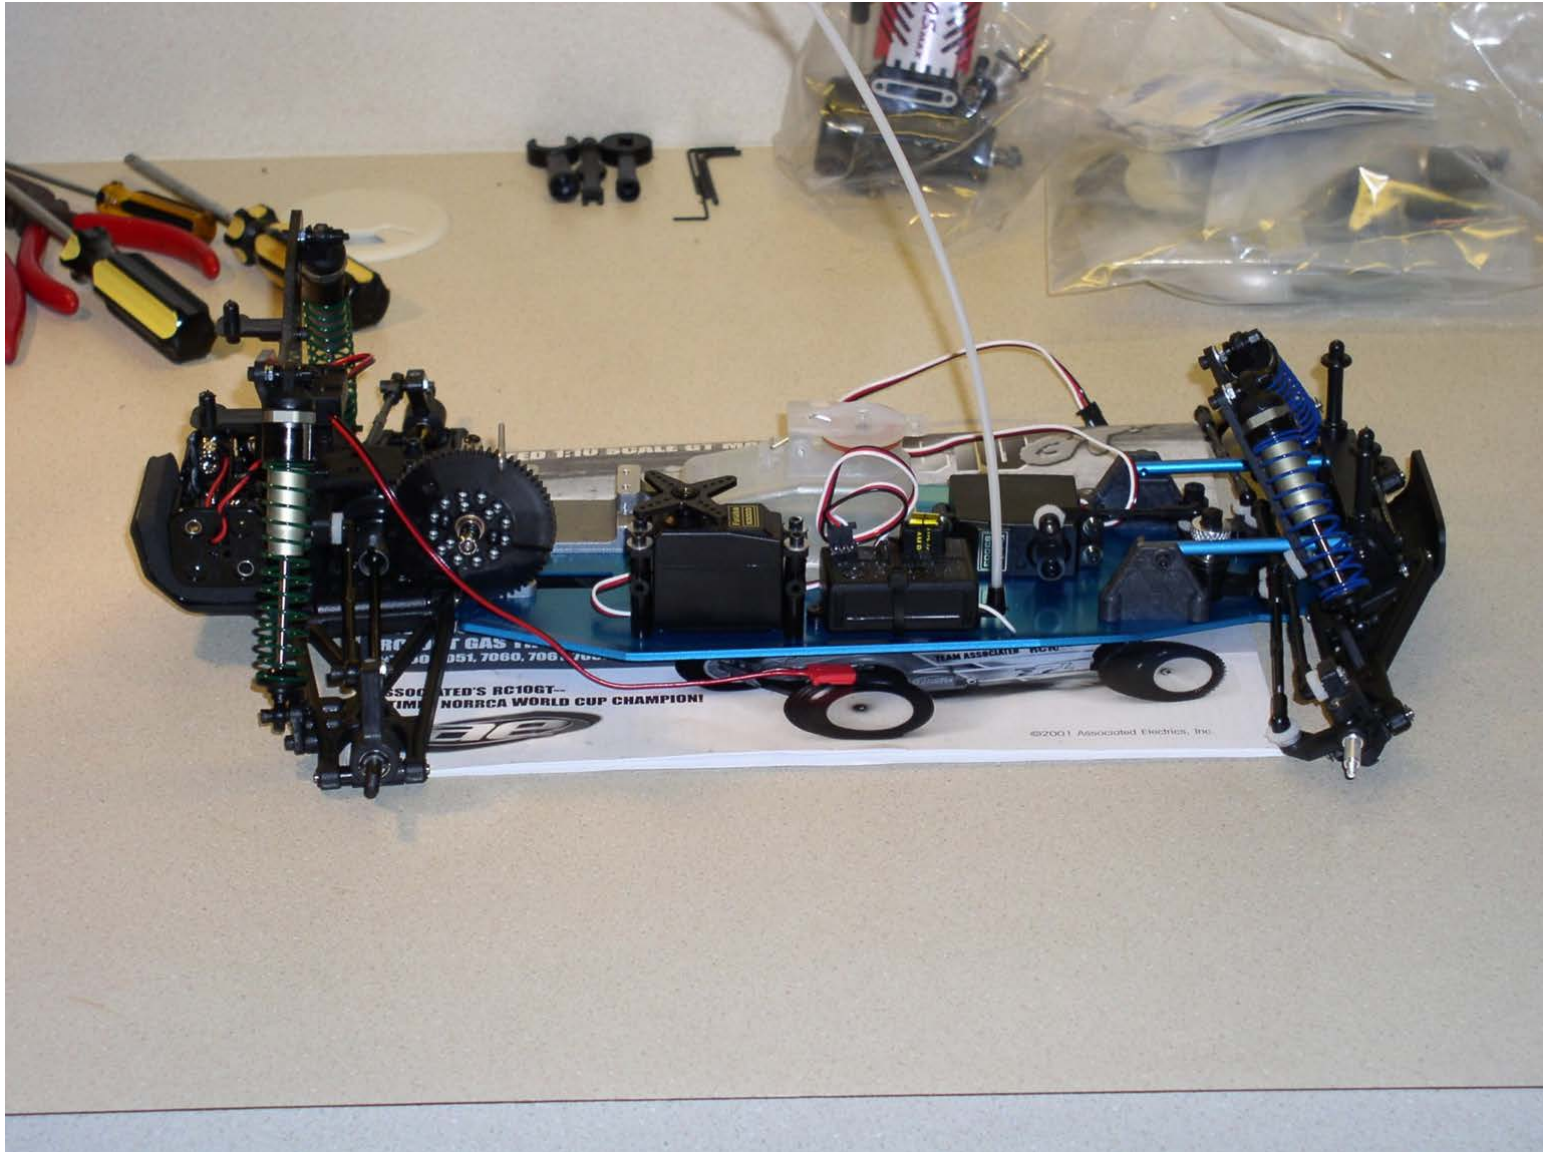

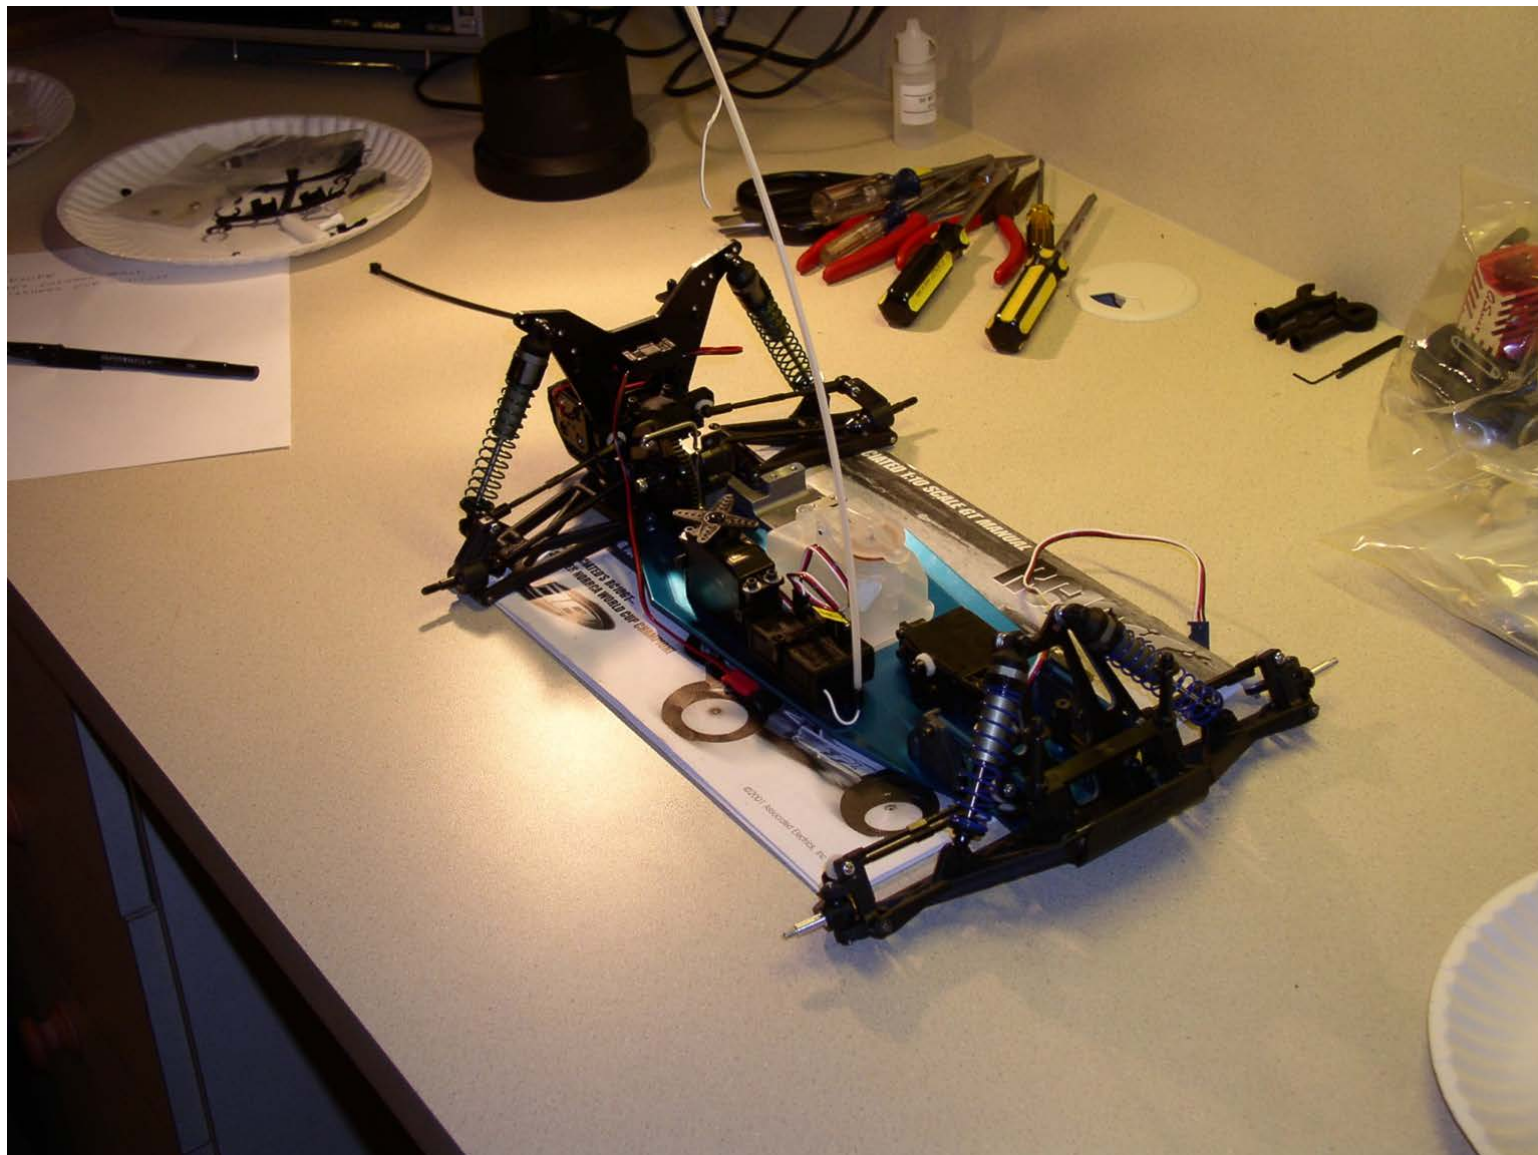

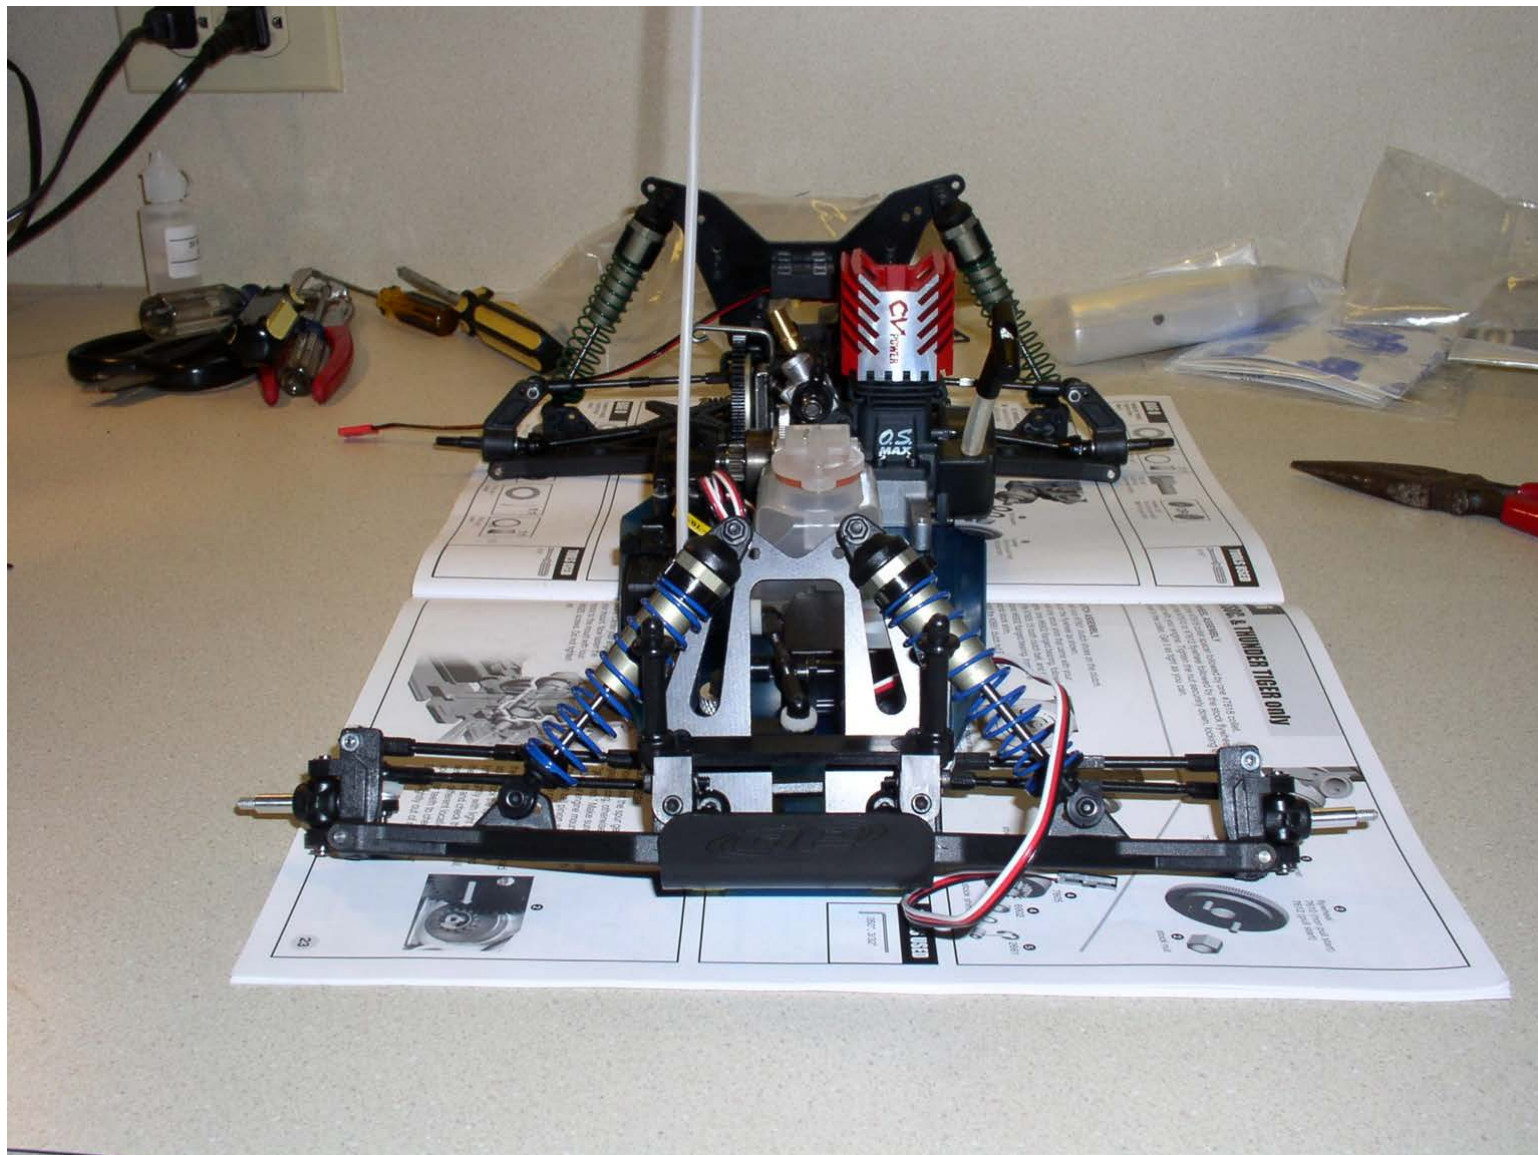

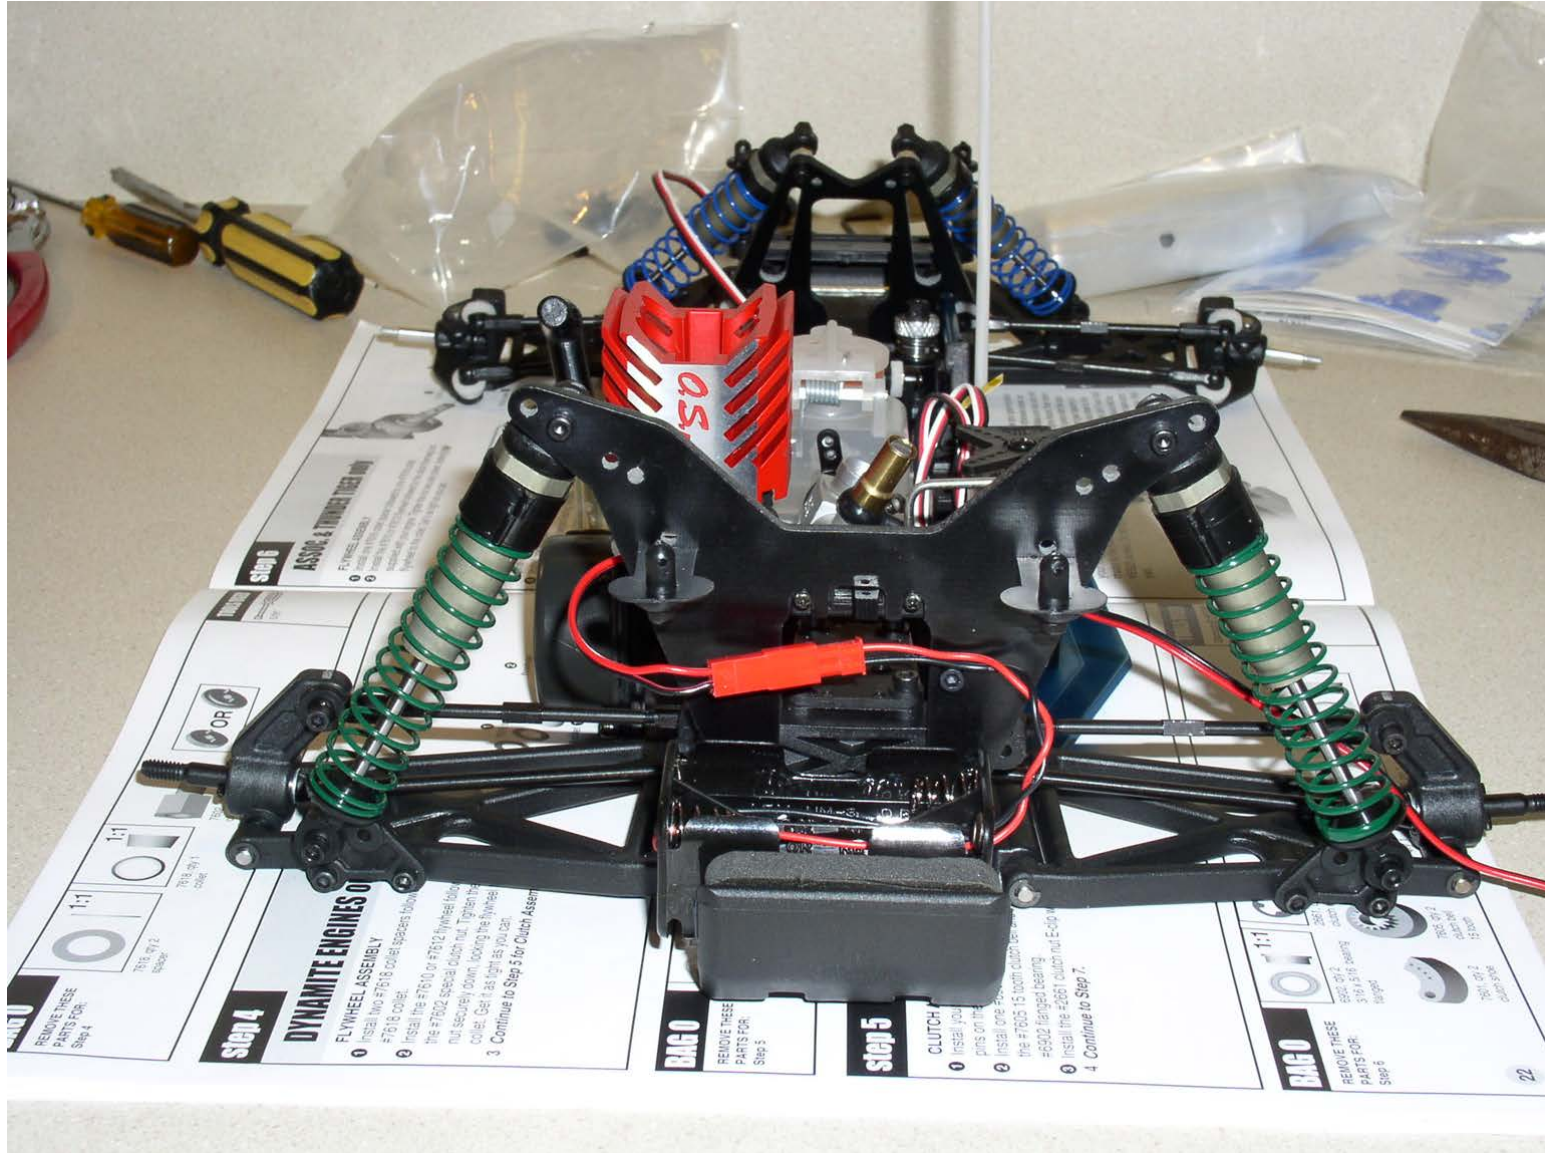

REMOVE THESE
PARTS FOR
STEP 4

1:1

7515 2x12
screw

1:1

7515 2x1
screw

OR

Step 4

DYNAMITE ENGINES

1. INSTALL TWO #7515 CRUEL BARRERS INTO THE #7512 SPECIAL CLUTCH NUT. TIGHTEN THE CLUTCH NUT AS TIGHT AS YOU CAN.
2. CONTINUE TO STEP 5 FOR CLUTCH ASSEMBLY

BAG 0

REMOVE THESE
PARTS FOR
STEP 5

step 5

CLUTCH

1. INSTALL YOUR #7515 CRUEL BARRERS INTO THE #7512 SPECIAL CLUTCH NUT. TIGHTEN THE CLUTCH NUT AS TIGHT AS YOU CAN.
2. CONTINUE TO STEP 6

BAG 0

REMOVE THESE
PARTS FOR
STEP 6

